

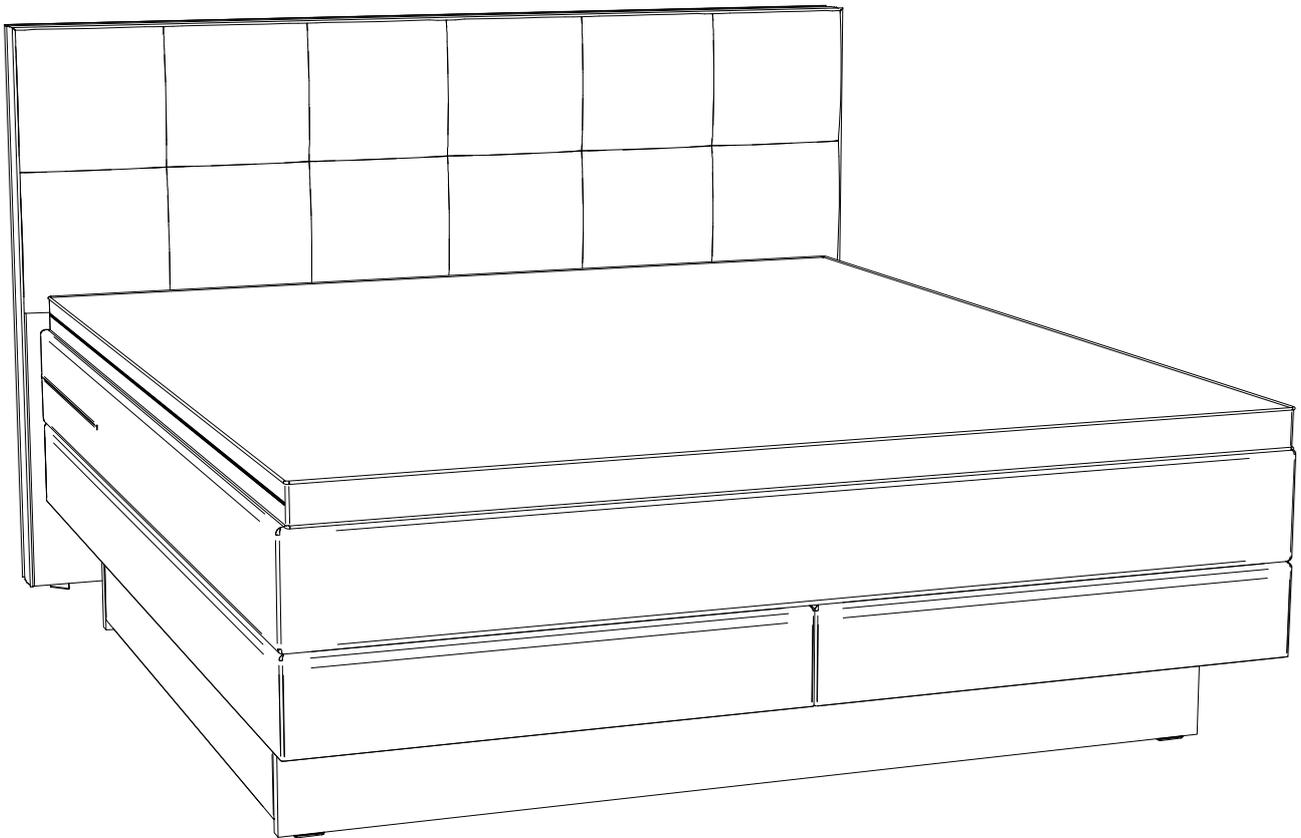

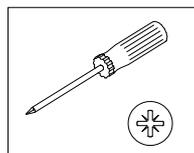











Miami






Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari




<p>A x4</p> 	<p>B x2</p> 	<p>C x1</p>  <p>749.871</p>			
<p>D x8</p> <p>Ø4.5x35</p>  <p>631.346</p>	<p>E x4</p>  <p>2xL 629.00094 2xR 629.00095</p>	<p>F x2</p> <p>Ø7x34</p>  <p>631.06400</p>	<p>G x2</p>  <p>631.00005</p>	<p>H x2</p> <p>Ø10x50</p>  <p>630.02400</p>	<p>I x6</p>  <p>630.37016</p>
<p>K x8</p>  <p>631.611</p>	<p>L x8</p> <p>M8x60</p>  <p>631.004</p>	<p>M x12</p>  <p>631.06100</p>	<p>N x4</p> <p>M8x40</p>  <p>631.112</p>	<p>Z x1</p> <p>SW6</p>  <p>631.103</p>	


1.








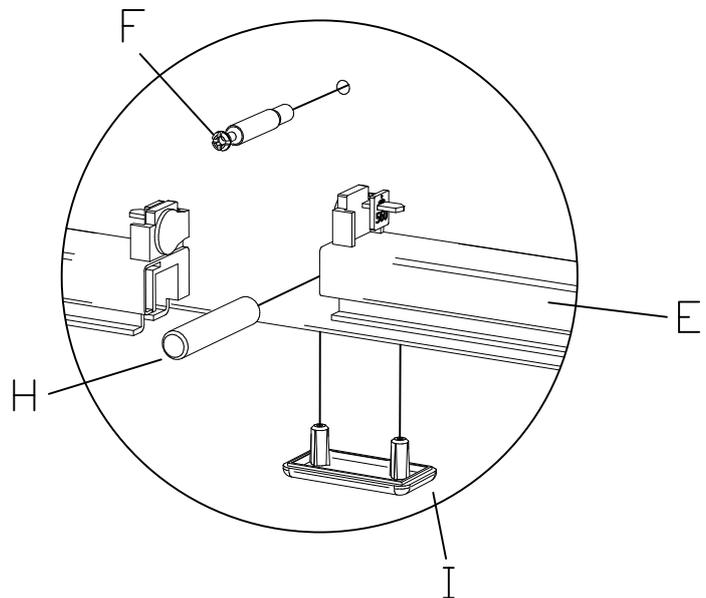
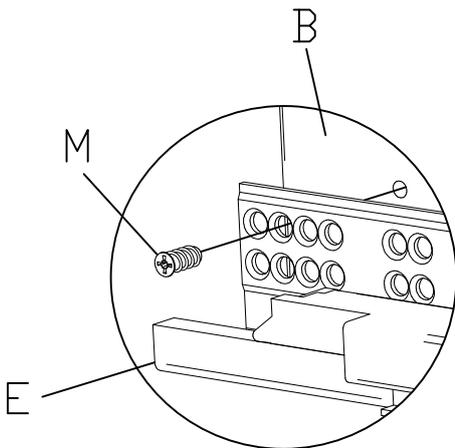
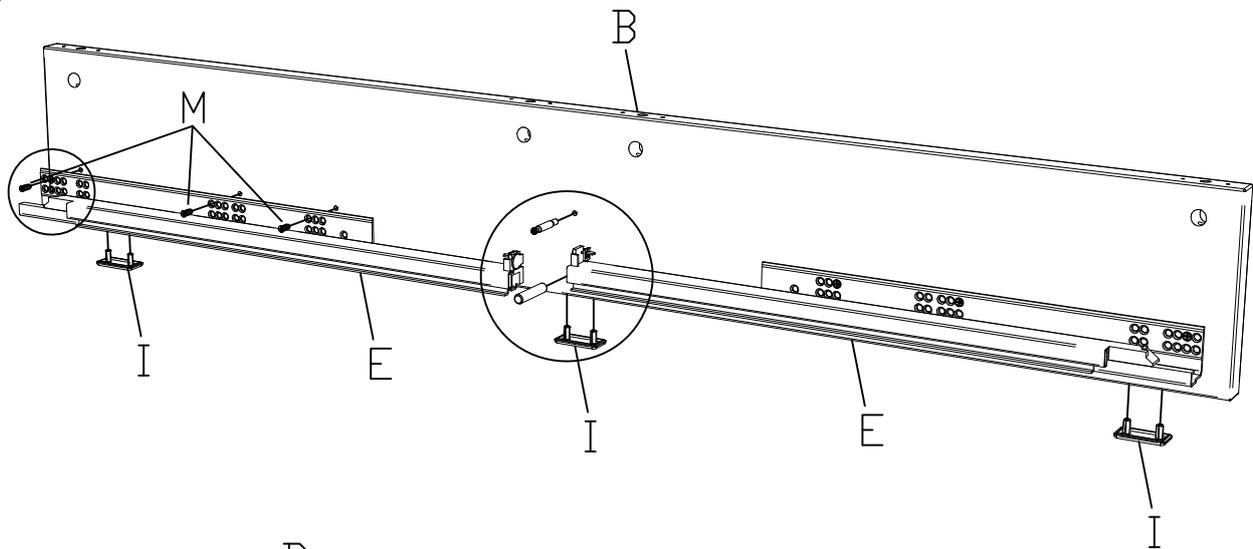



2.

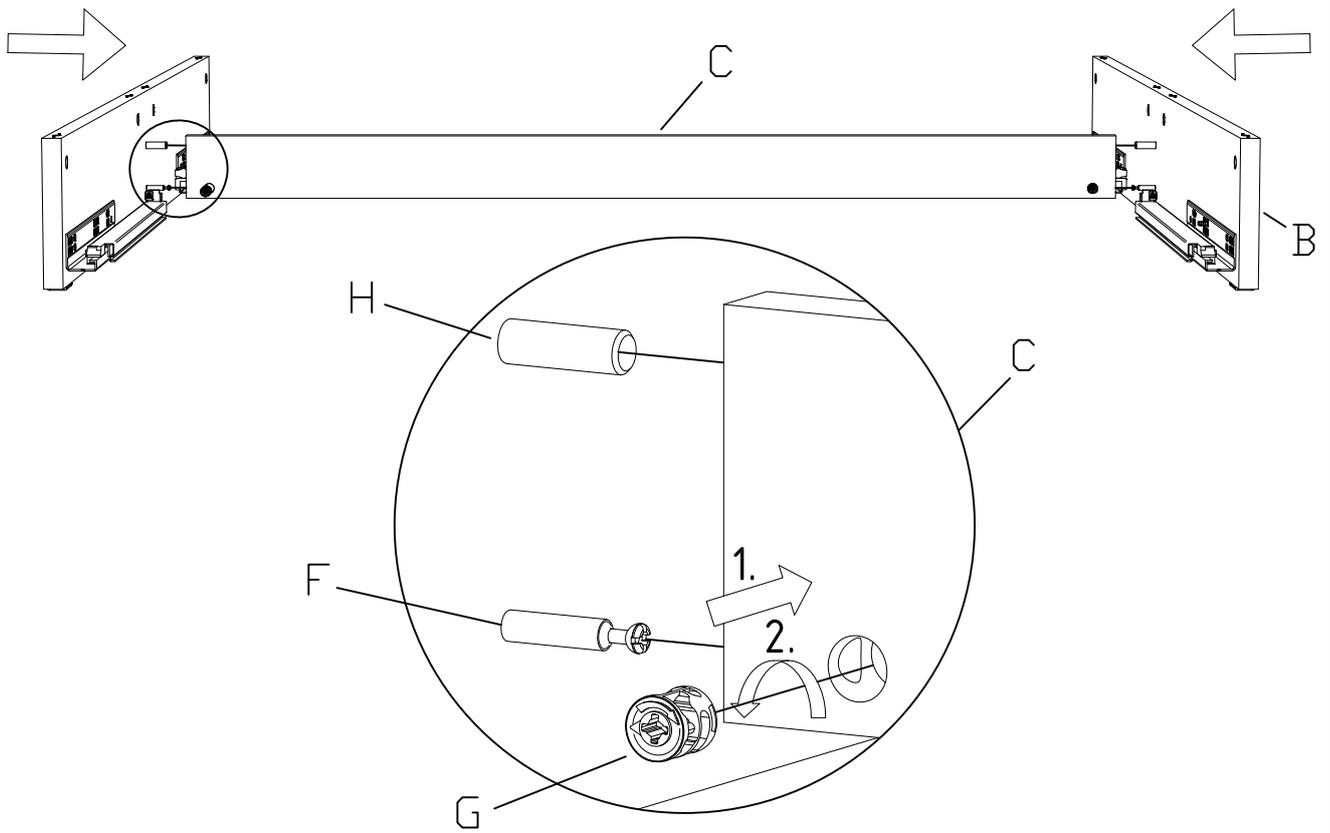


3.

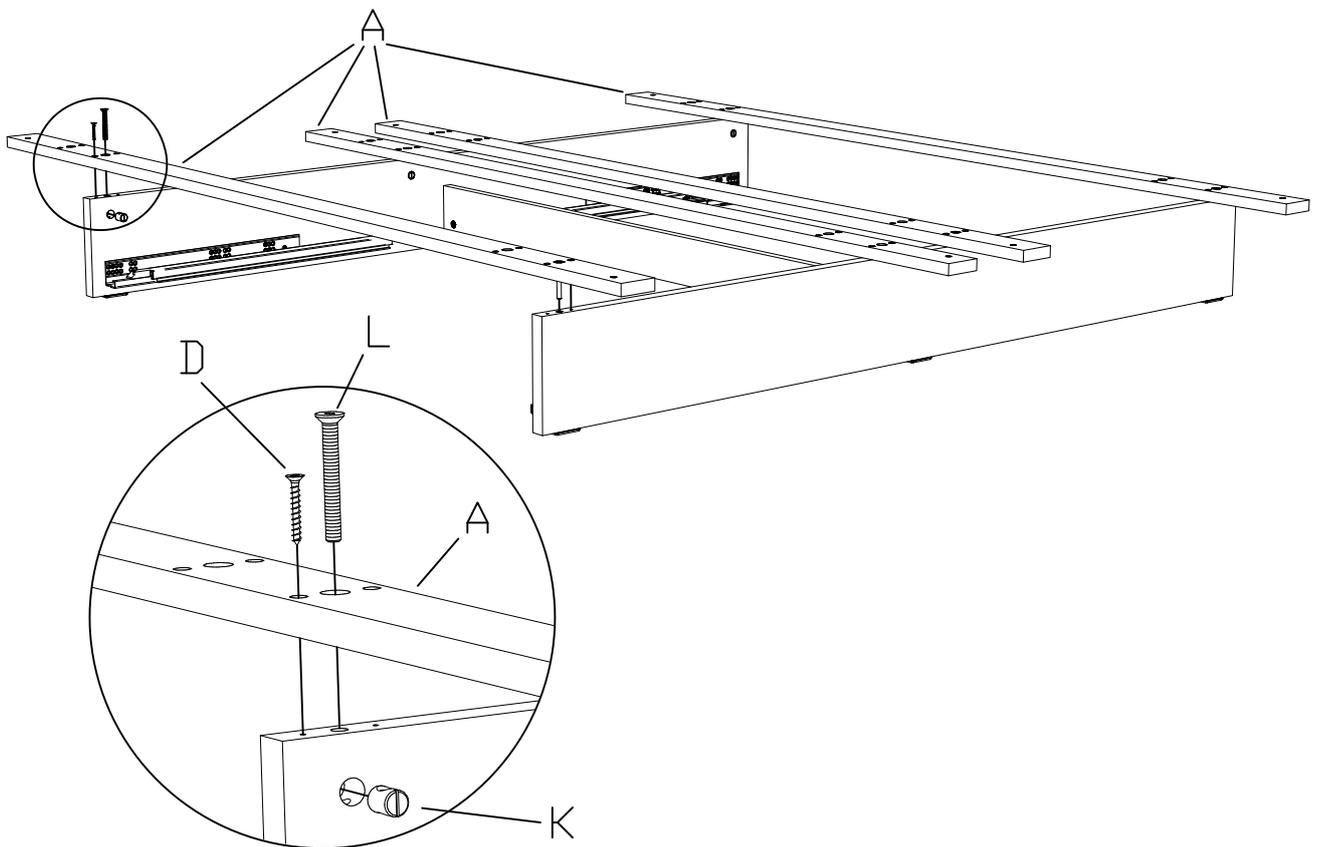

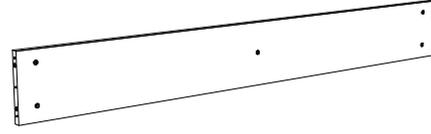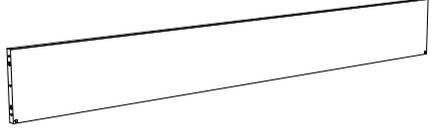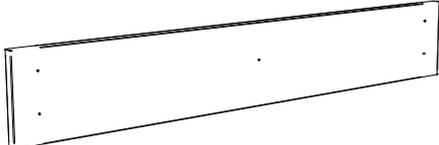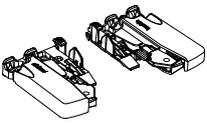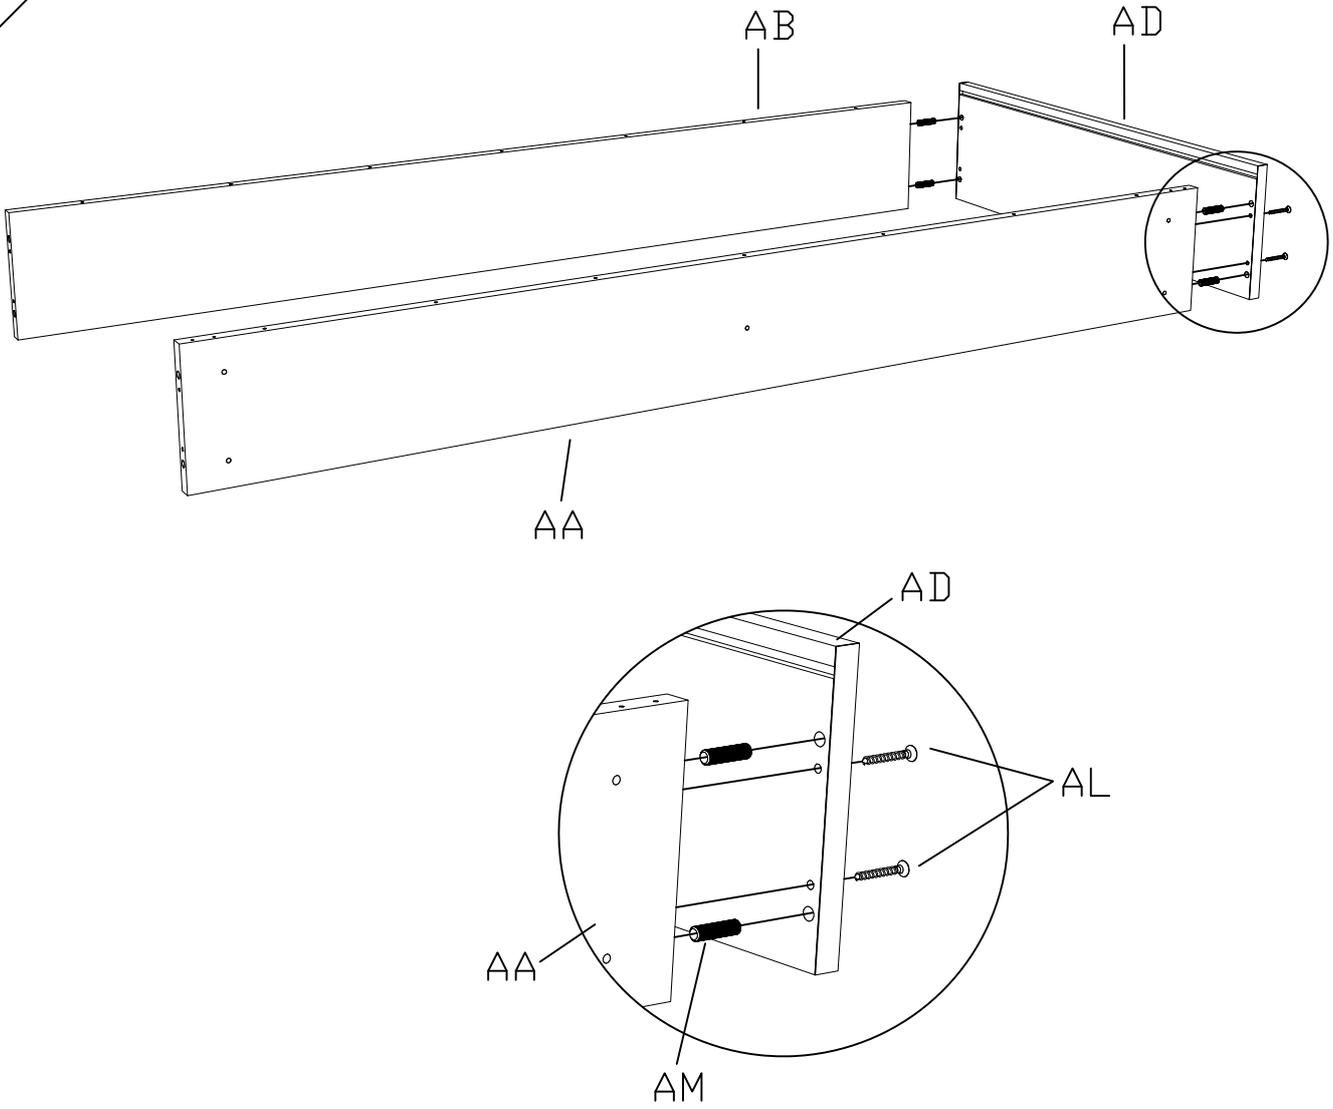
AA 1x  749.886		AB x1  749.888		AC x1  749.872	
AD x2  749.887	AE x1  749.889	AF x2  629.00111	AG x2  li 629.00096 re 629.00097	AH x14 Ø4x25  631.30900	AI x4 Ø4x12  631.1630
AK x2 Ø3.5x20  631.300	AL x13 Ø4x35  631.346	AM x8 Ø8x30  630.021			

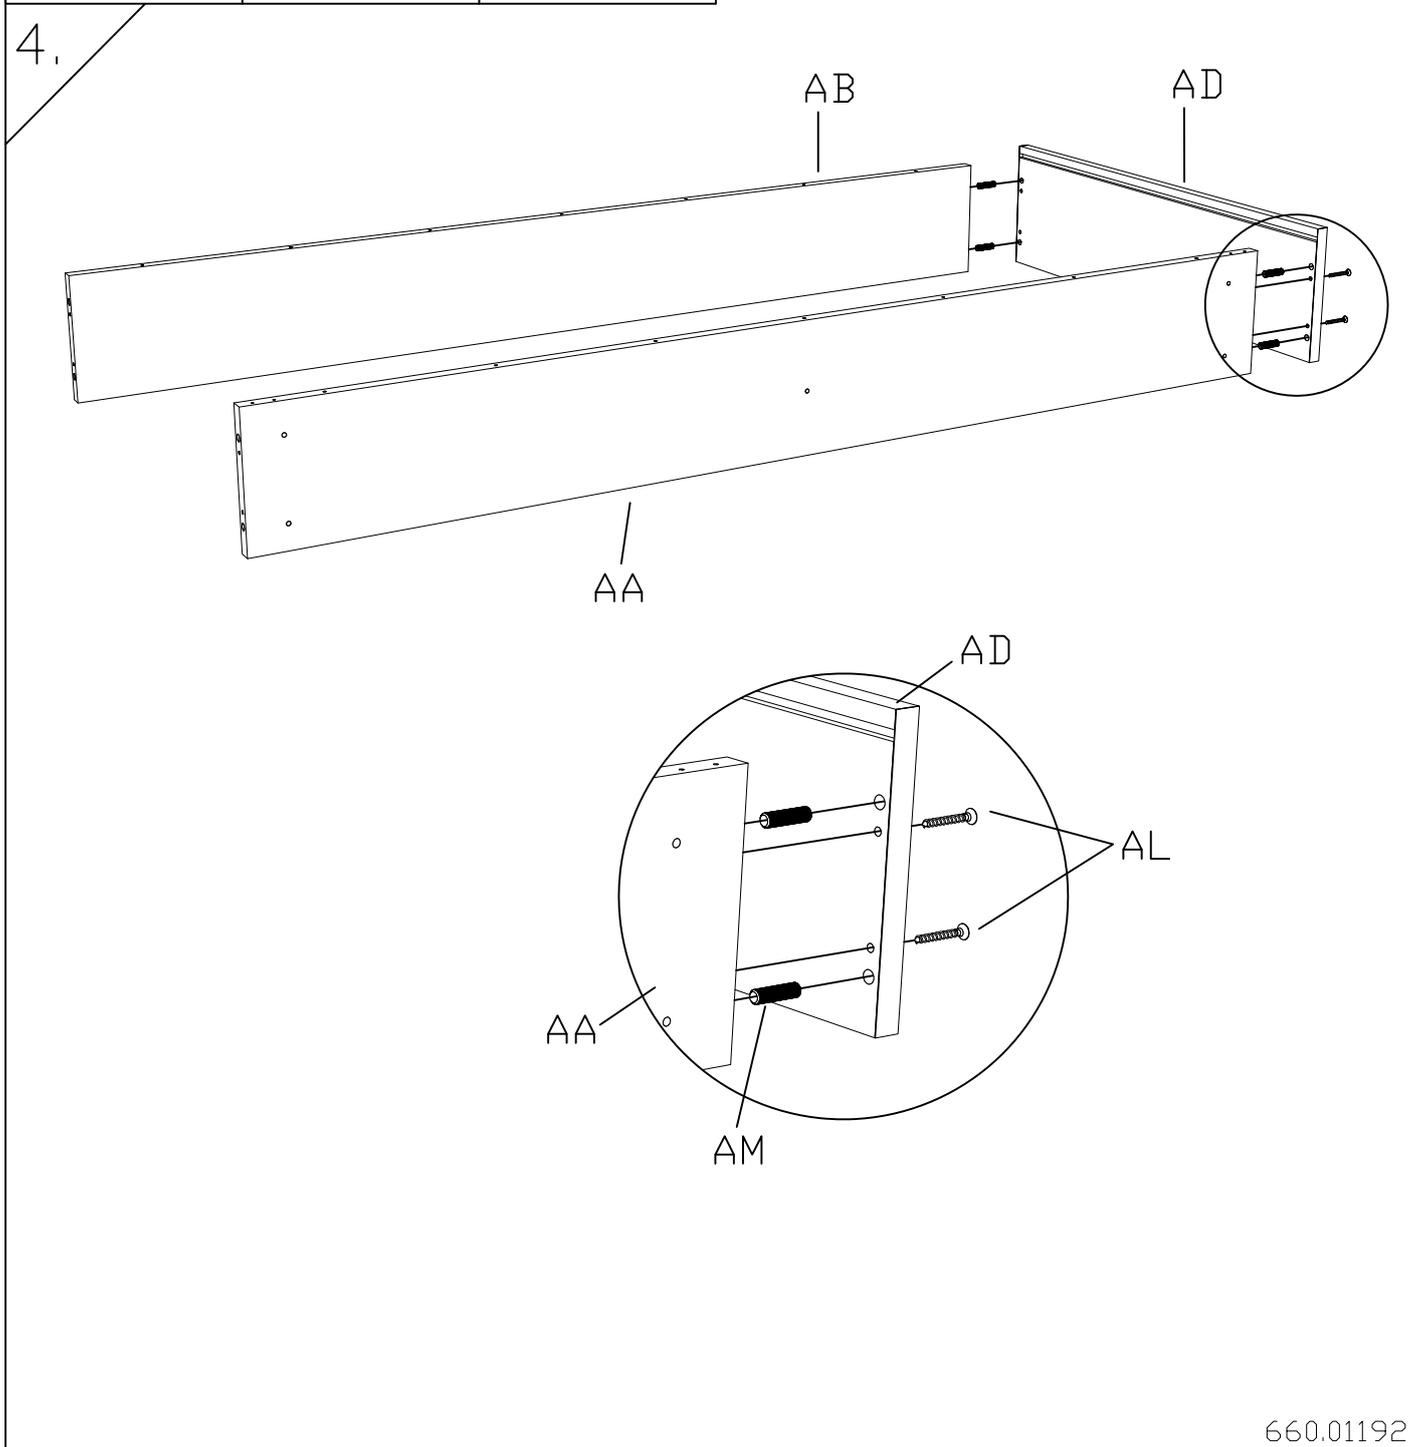


5.

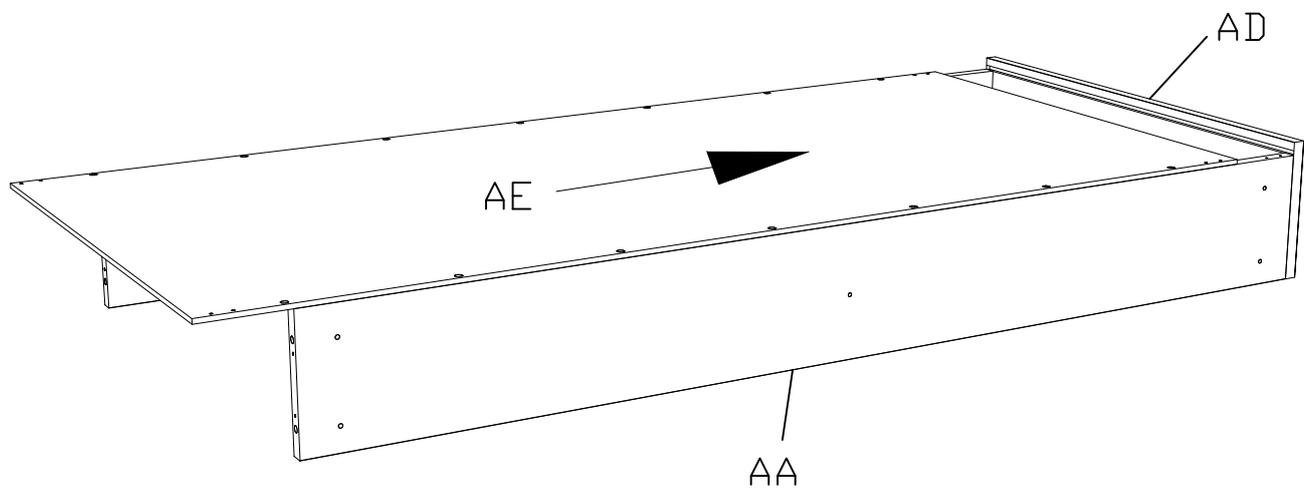


6.

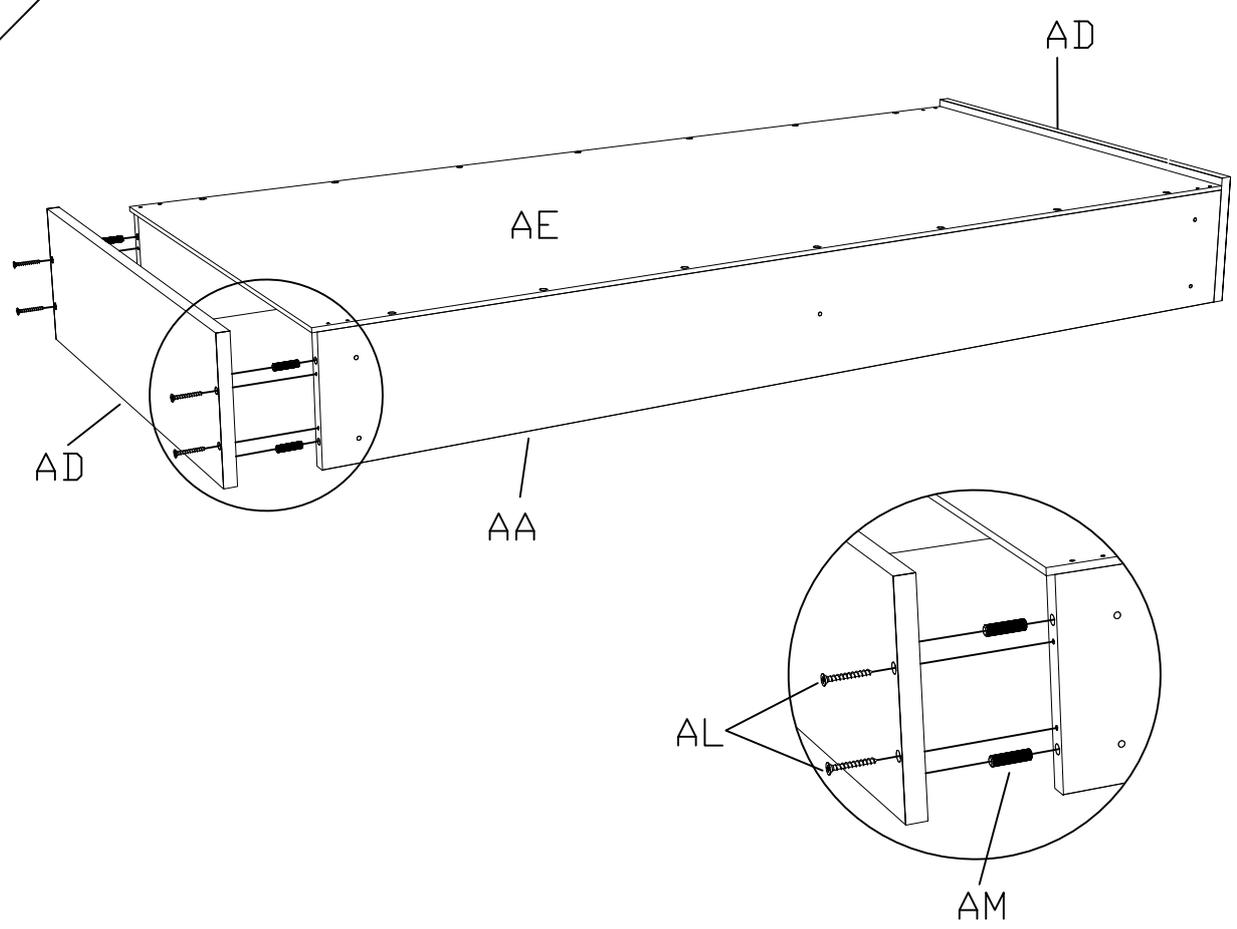



7.

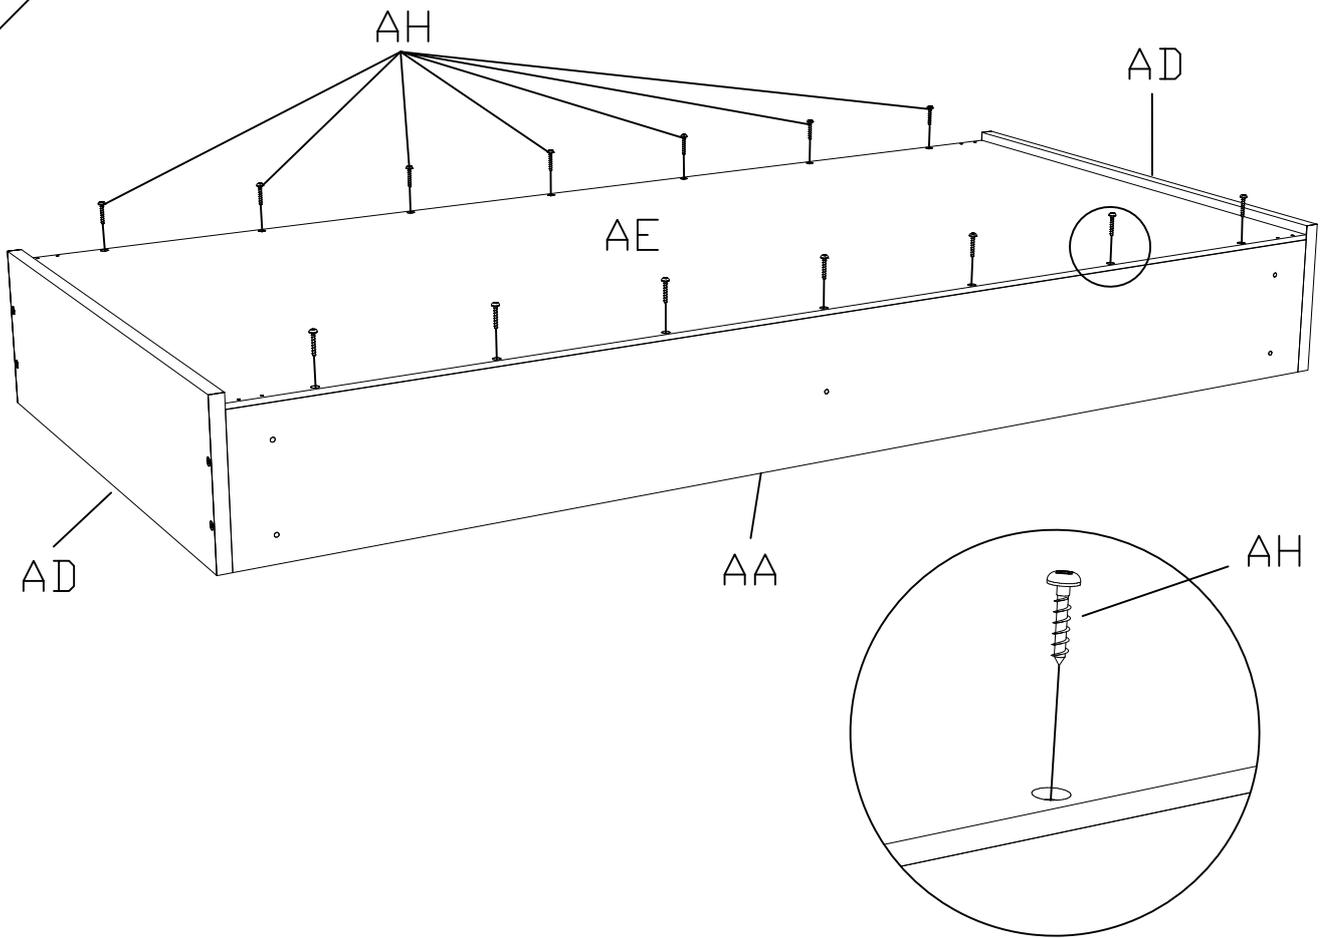


8.

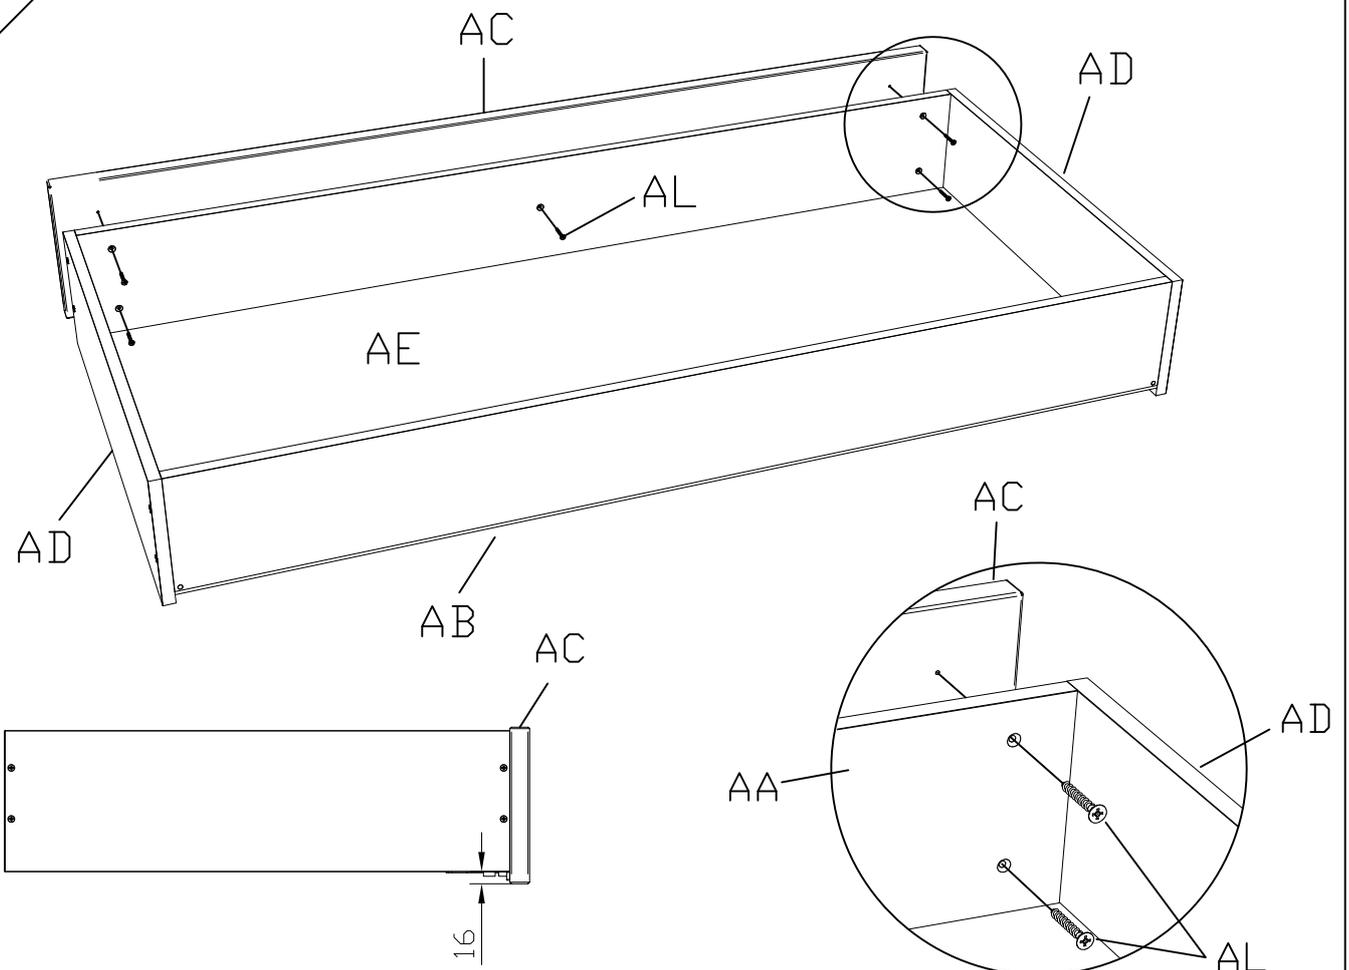

9.

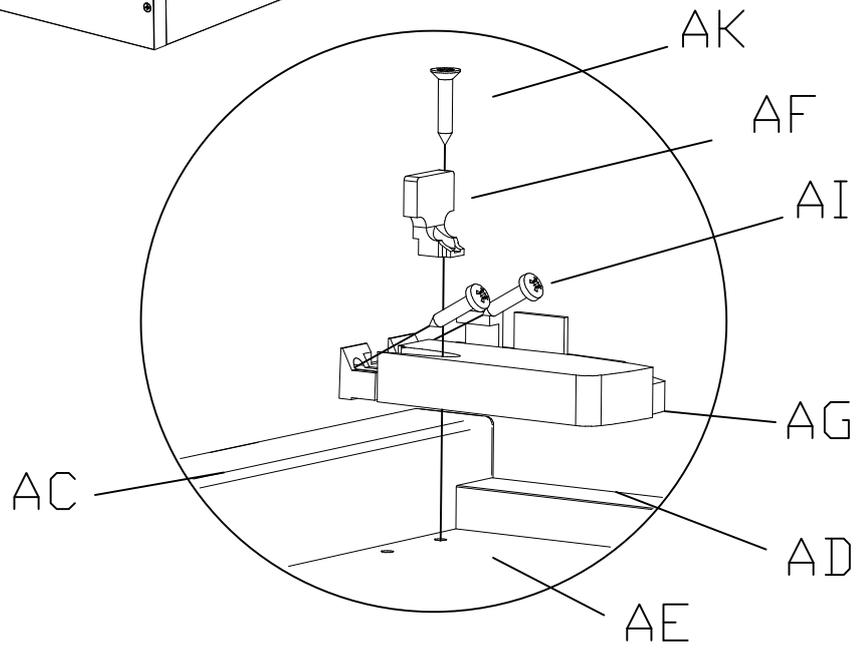
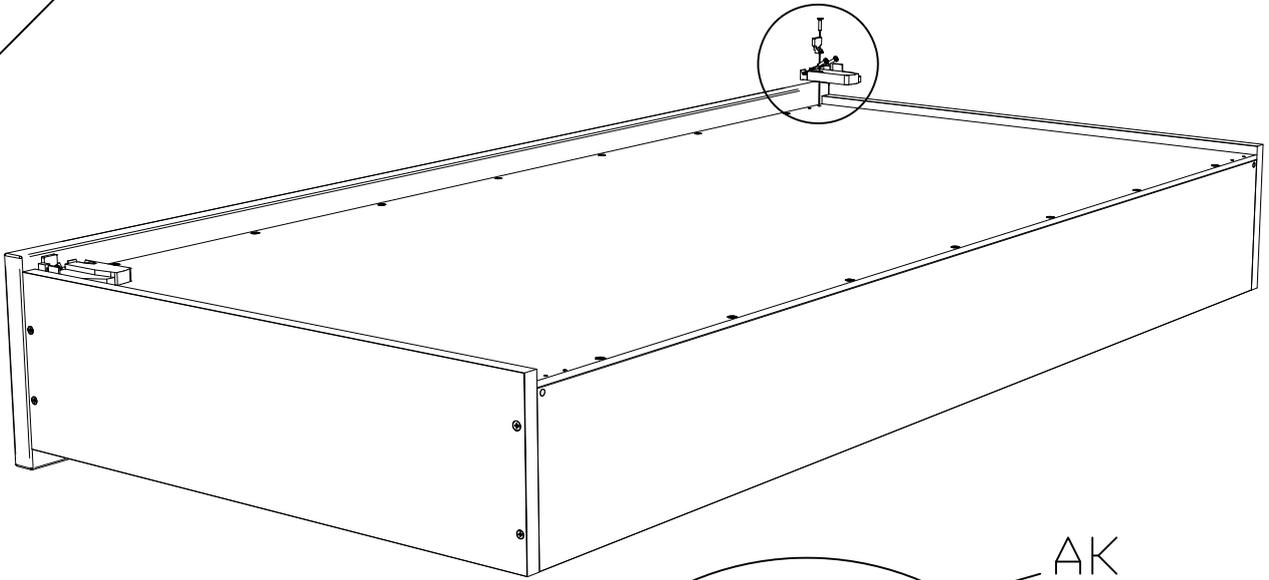


10.


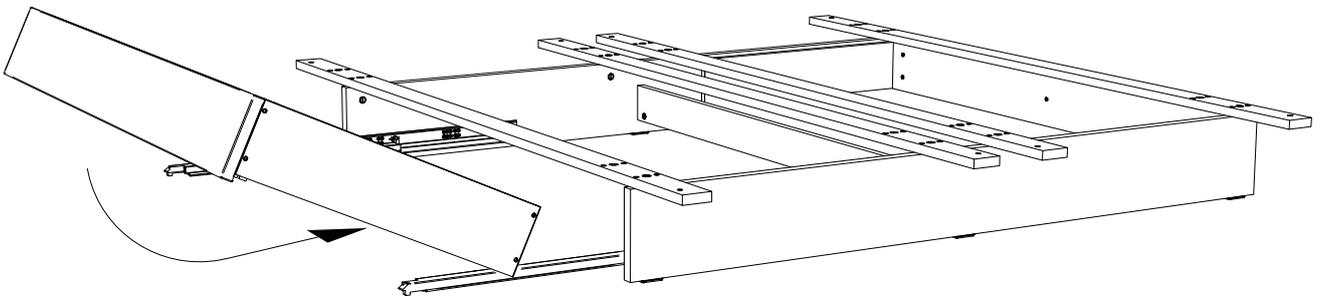


11.

CLIC




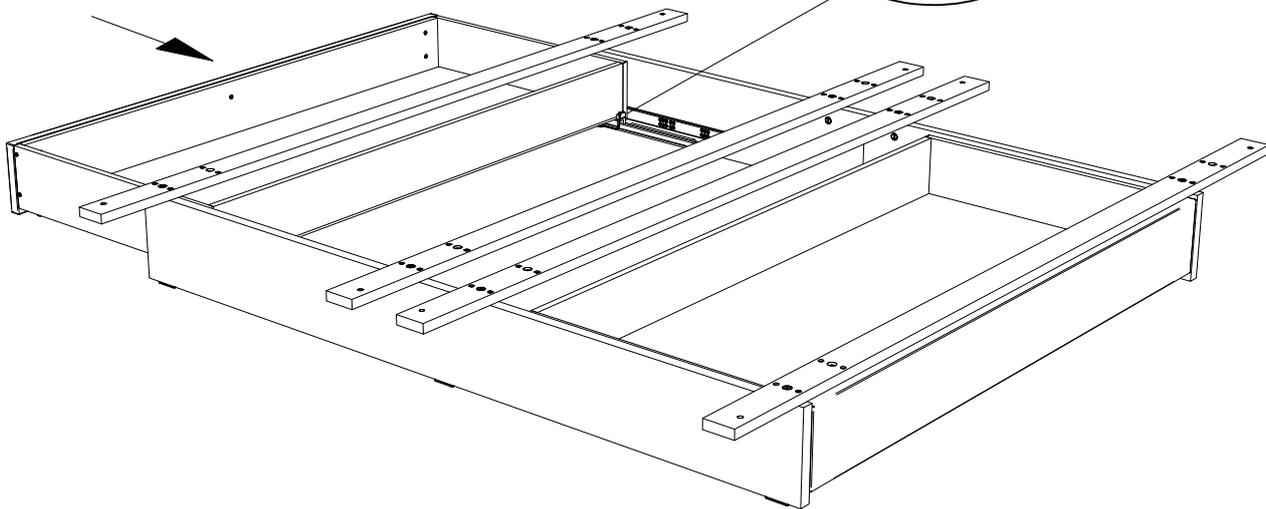
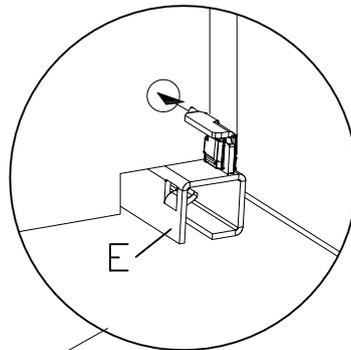




demontage / disassembly / démontage / smontaggio

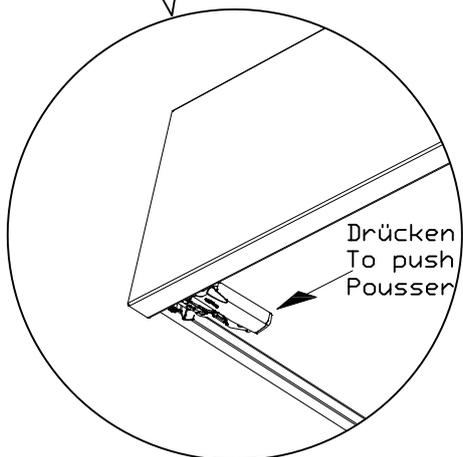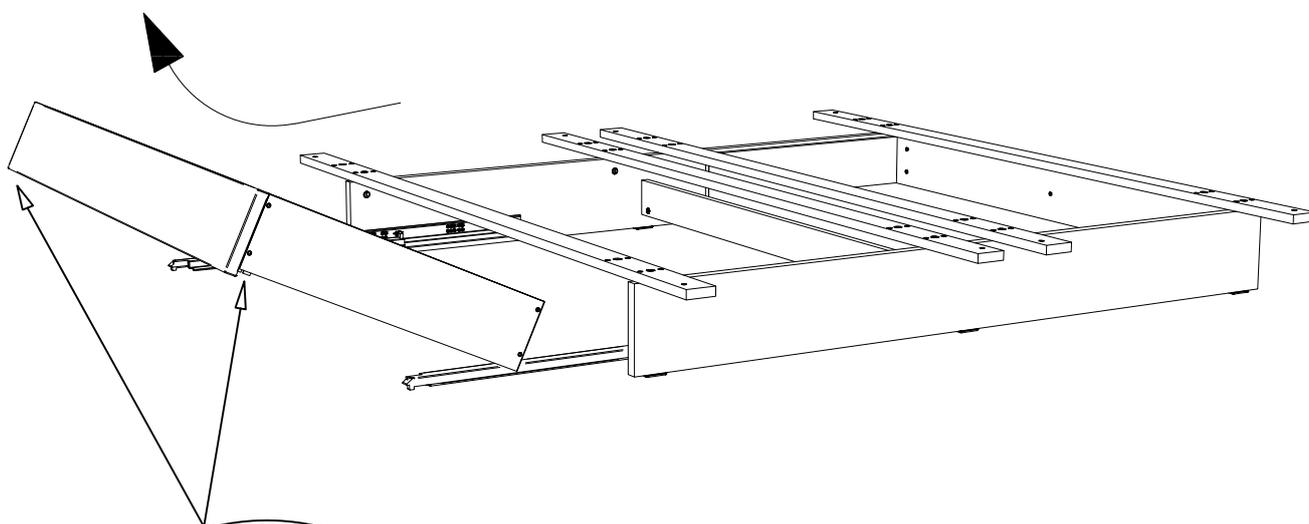

Schubladen herausziehen
Pull out drawers
Sortir les tiroirs

12.

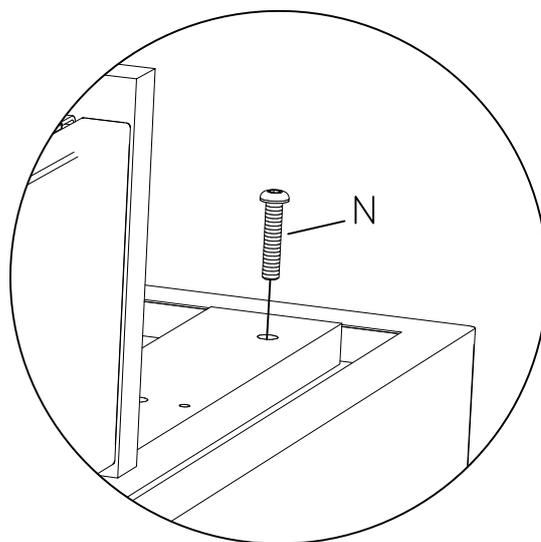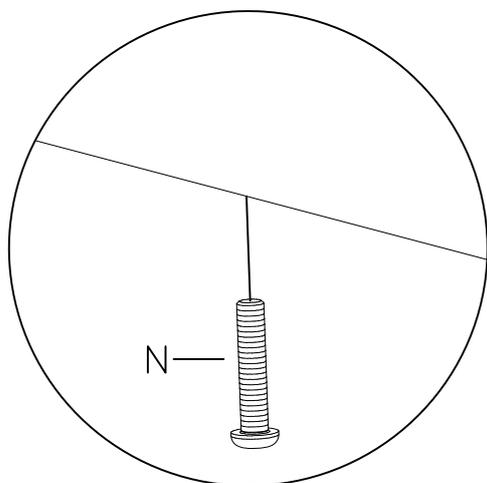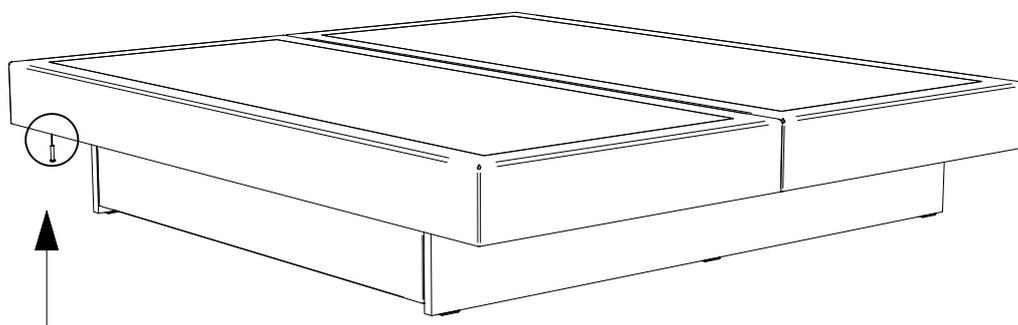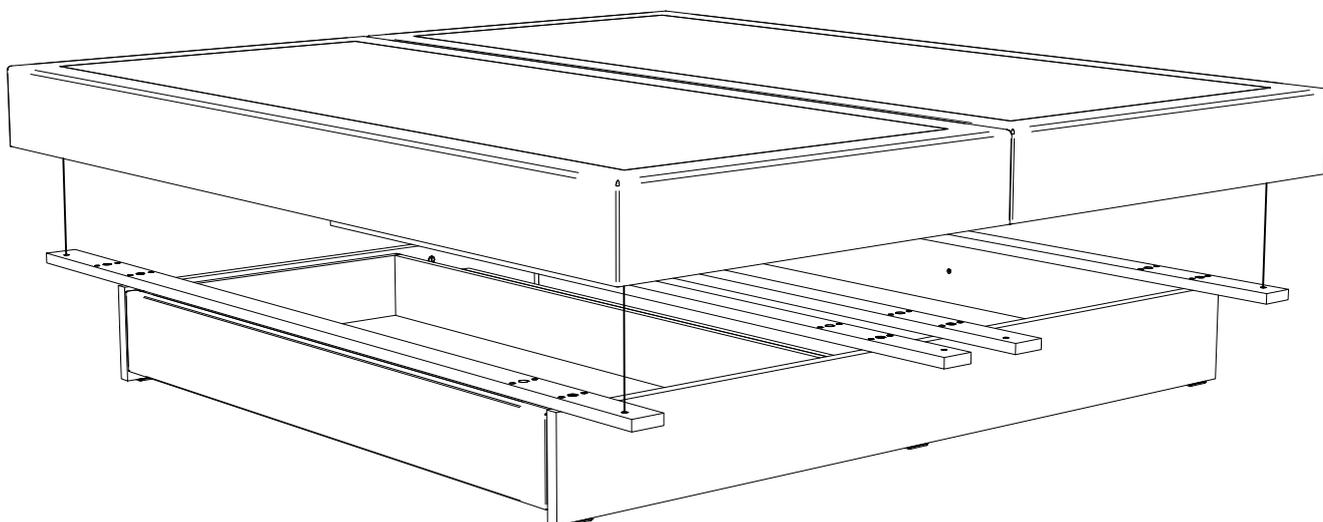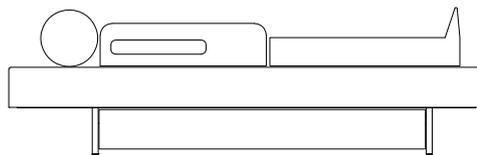

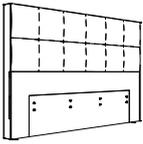 <p>□ x1</p>	 <p>P x8</p> <p>631.621</p>	 <p>Q x8</p> <p>631.080</p>	 <p>R x8</p> <p>631.015</p>
---	--	--	--

